

DIY3061 Bedside pocket

You need to cut the following parts


Fabric

Part 1	Pocket	x1
Part 2	Back	x1


Style-vil

Part 1	Pocket	x1
--------	--------	----


Accessories:
3,2 mtr bias tape

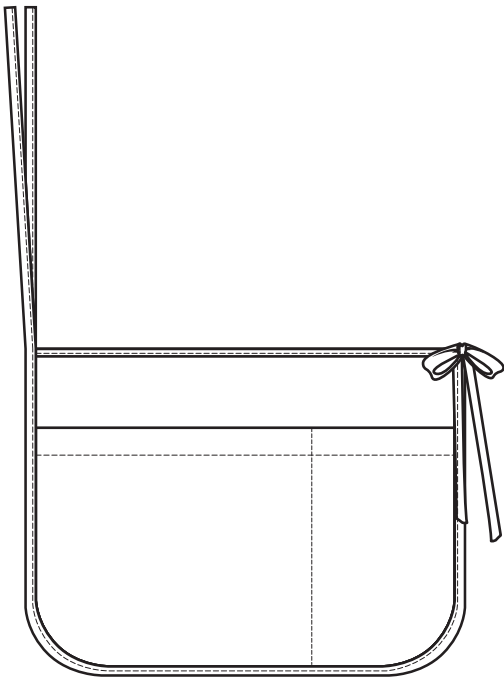

Symbols you may find on your patterns



Grain line



Notch


10 CM

Self
made®

All rights
reserved
Selfmade

CONTROL SQUARE:
Print this page, to check the
square measurements:
If the measurements do not match,
please adjust your printer settings.

CONTROL PAGE FIT:
In print preview check page margin.
Margin have to be equal on
all 4 sides of each page.

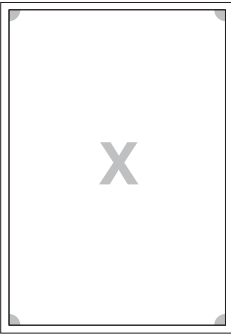


10 CM

Self
2

Self
made[®]

DIY3061
PART 1
POCKET
✂ x1


Free download from Selfm



ade.com


made[®]4e

Self
made[®]



DIY3061
PART 2
BACK SIDE
✂ x1

Glue or tape your patterns together as shown in the diagram

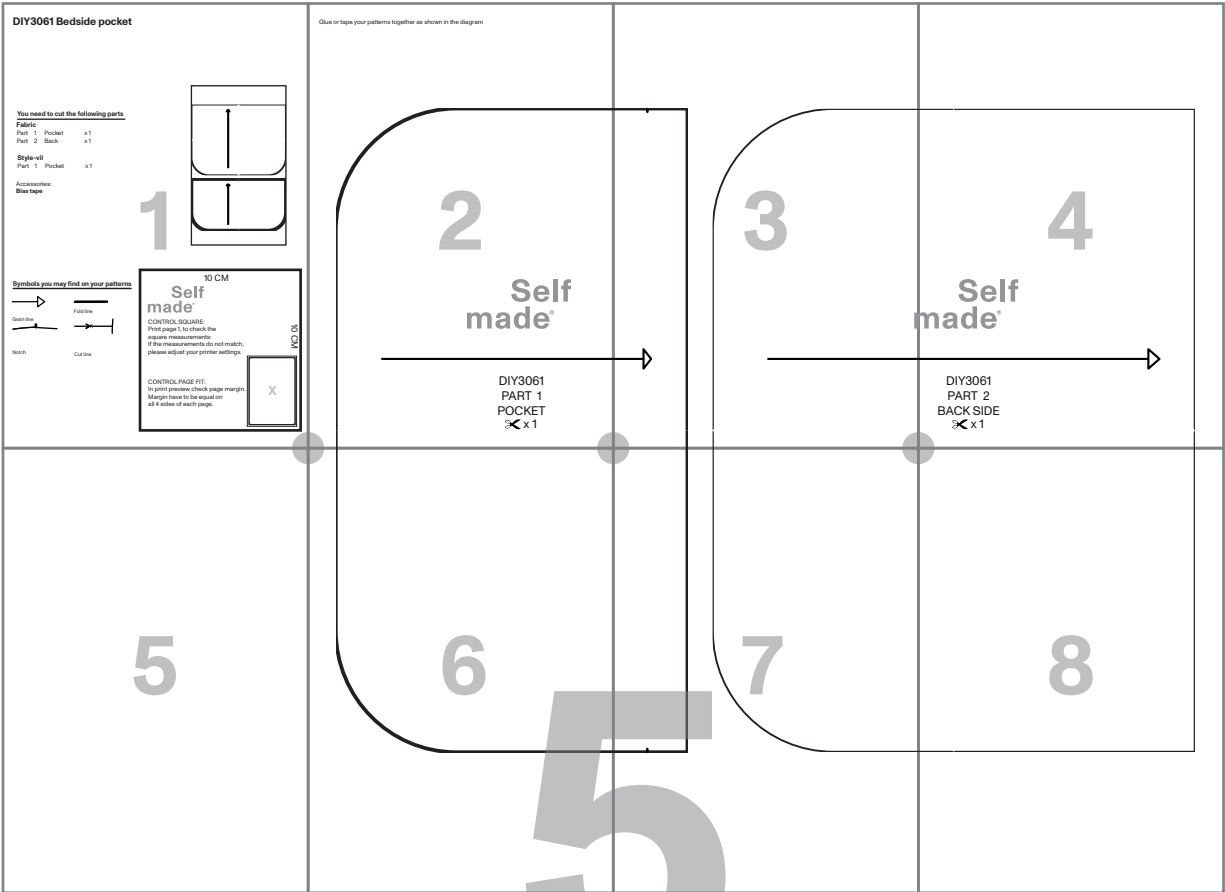

See

Free download from Selfm

7

ade.com

ade®